



before installing

please **carefully** read these instructions prior to install to avoid any damage from incorrect installation or mishandling

remember:

wait 24 hours
for silicone to
dry before
using water

do not place
tools &
hardware near
sink during
install

THANK YOU FOR CHOOSING A CRETE COLLECTIVE PRODUCT FOR YOUR SPACE.

THIS DOCUMENT PROVIDES YOU WITH COMPREHENSIVE GUIDE TO ENSURE THE INSTALLATION OF YOUR NEW PRODUCT IS AS SMOOTH AND STRAIGHTFORWARD AS POSSIBLE.

BELOW YOU'LL FIND STEP BY STEP INSTRUCTIONS TO ENSURE A SUCCESSFUL INSTALLATION. WHILE YOU CAN EASILY INSTALL THIS NEW SINK YOURSELF, CRETE SUGGESTS ALWAYS HIRING A TRAINED PROFESSIONAL FOR INSTALLATION TO MITIGATE ANY POTENTIAL ISSUES. CRETE COLLECTIVE CANNOT BE HELD LIABLE FOR ANY DAMAGES OR INJURY ARISING FROM IMPROPER INSTALLATION OF THE SINK. IT IS CRUCIAL TO FOLLOW THE PROVIDED INSTRUCTIONS CAREFULLY AND REFRAIN FROM OVERTIGHTENING THE SINK DURING INSTALLATION.



1
REMOVE SINK FROM BOX AND PUT IN INTENDED SPACE. GATHER GLOVES, BATHROOM SILICONE, CLEAN CLOTHS, AND DRAIN ASSEMBLY




2
OPTION 1: INSTALL A CROSS MEMBER BETWEEN STUDS, RECESSED 1/4" FROM FLUSH FACE OF STUD. THIS ALLOWS ROOM FOR MOUNT TO NOT INTERFERE WITH DRYWALL INSTALLATION



2B
OPTION 2: INSTALL BRACKET DIRECTLY OVER DRYWALL OR TILE, THROUGH TO SECURE STUD AND USING PROPER ANCHORS WHERE NECESSARY




3
USE MINIMUM 4 HOLES TO SECURE BRACKET TO CHOSEN BACKING. IF USING ANCHORS, ENSURE AT LEAST ONE STUD IS USED IN CONJUNCTION WITH ANCHORS

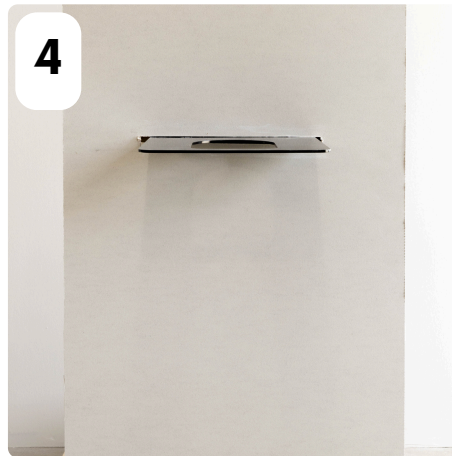

4
INSTALL YOUR DRYWALL OVER THE BRACKET



5
APPLY SILICONE TO TOP OF BRACKET. THEN CAREFULLY PLACE SINK IN ITS INTENDED LOCATION, ALIGNING SINK OVER BRACKET CENTER.

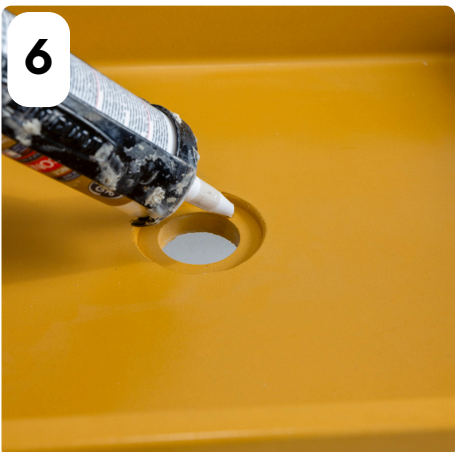

6
FILL DRAIN AREA WITH PLUMBERS PUTTY OR SILICONE, SURROUNDING DRAIN RIM



7
SLIDE DRAIN INTO PLACE, HAND-TIGHTEN. DO NOT OVERTIGHTEN



8
REMOVE EXCESS PUTTY, ALLOW SILICONE TO DRY FOR 24 HOURS BEFORE USE